

1997-98 ELECTRICAL


Fuses & Circuit Breakers - Corvette

IDENTIFICATION

CAUTION: When battery is disconnected, vehicle computer and memory systems may lose memory data. Driveability problems may exist until computer systems have completed a relearn cycle. See **COMPUTER RELEARN PROCEDURES** article in **GENERAL INFORMATION** before disconnecting battery.

INSTRUMENT PANEL ELECTRICAL CENTER

NOTE: Instrument panel electrical center is located under passenger side toe board.

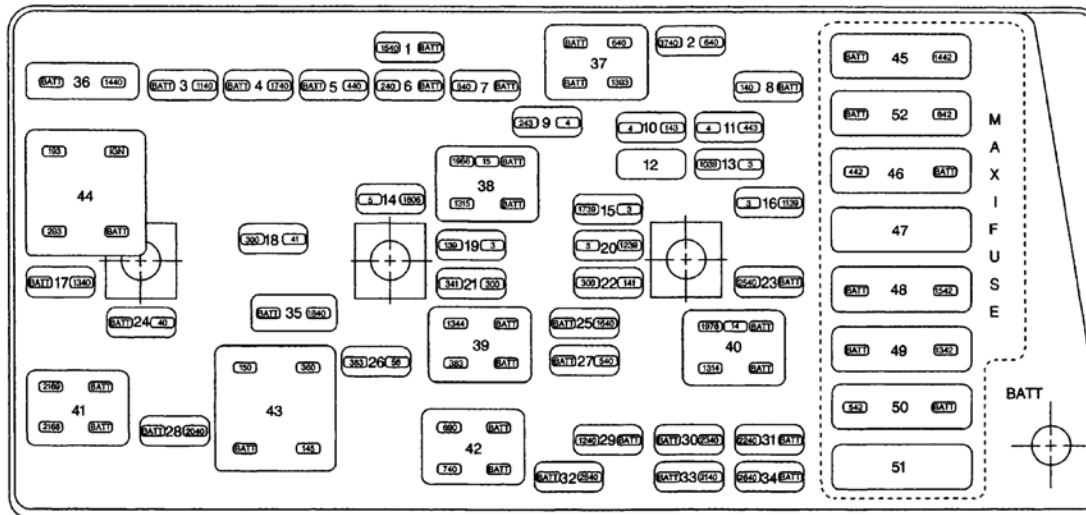

G00100758

Fig. 1: Identifying Instrument Panel Electrical Center Components
Courtesy of GENERAL MOTORS CORP.


Fuse	Usage	Fuse	Usage
1	Console Cigarette Lighter	28	Bose Speakers
2	Monitored (Inadvertent) Load Control	29	Diagnostic
3	Lumbar Seat	30	Right Door Control Module
4	Driver Seat Control Module	31	Power Feed Door Right
5	Radio	32	Fuel Tank Door
6	Parking Lamps, Taillamps	33	Door Control Module Left
7	Cigar Lighter	34	Power Feed Door Left
8	Stop Hazard Flashers	35	Driver Power Seat (Circuit Breaker)
9	Body Control Module	36	Passenger Power Seat (Circuit Breaker)
10	Windshield Wiper/Washer	37	Micro Relay - Monitored (Inadvertent) Load Control
11	Accessory Power	38	Micro Relay - Right Daytime Running Lamp
12	Blank	39	Micro Relay - Hatch Release
13	Body Control Module	40	Micro Relay -Left Daytime Running Lamp
14	Crank	41	Blank
15	Hazard/Turn Signal	42	Micro Relay - Courtesy Lamps
16	Air Bag	43	Bose Mini Relay - Speakers
17	Blank	44	Mini Relay - Rear Defogger
18	HVAC Controls	45	Maxifuse - Ignition 2
19	Instrument Panel Control	46	Maxifuse - Rear Defogger
20	Cruise Control	47	Blank
21	Brake Transmission Shift Interlock	48	Maxifuse - Ignition
22	Body Control Module - Ignition 3	49	Maxifuse - Blower Motor
23	Body Control Module - Ignition 2	50	Starter
24	Radio Antenna	51	Blank
25	Body Control Module - Ignition 1, Instrument Panel Control	52	Maxi Circuit Breaker - Headlamps
26	Hatch/Trunk Release		
27	HVAC Controls		

G00100759

Fig. 2: Instrument Panel Electrical Center Legend
Courtesy of GENERAL MOTORS CORP.

UNDERHOOD ELECTRICAL CENTER


NOTE: Underhood electrical center is located in the right rear corner of engine compartment, near battery. See Fig. 3 .

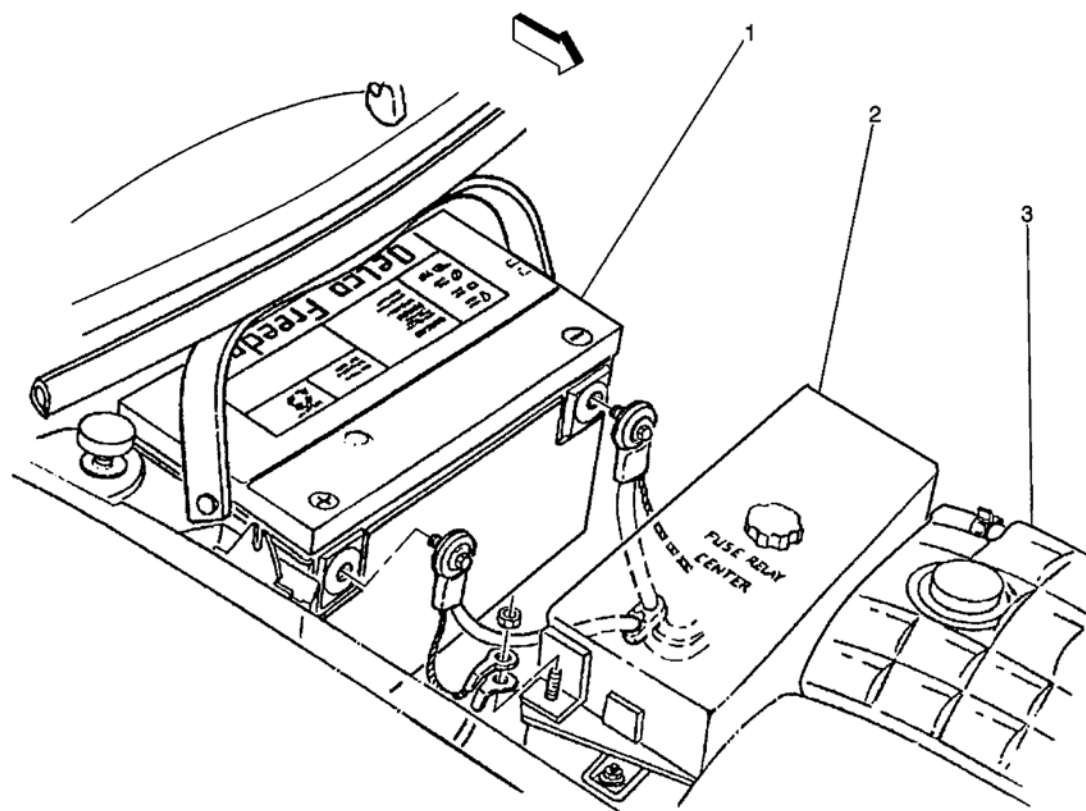

- (1) Battery
- (2) Underhood Electrical Center
- (3) Engine Coolant Reservoir

G00100760

Fig. 3: Locating Underhood Electrical Center
Courtesy of GENERAL MOTORS CORP.

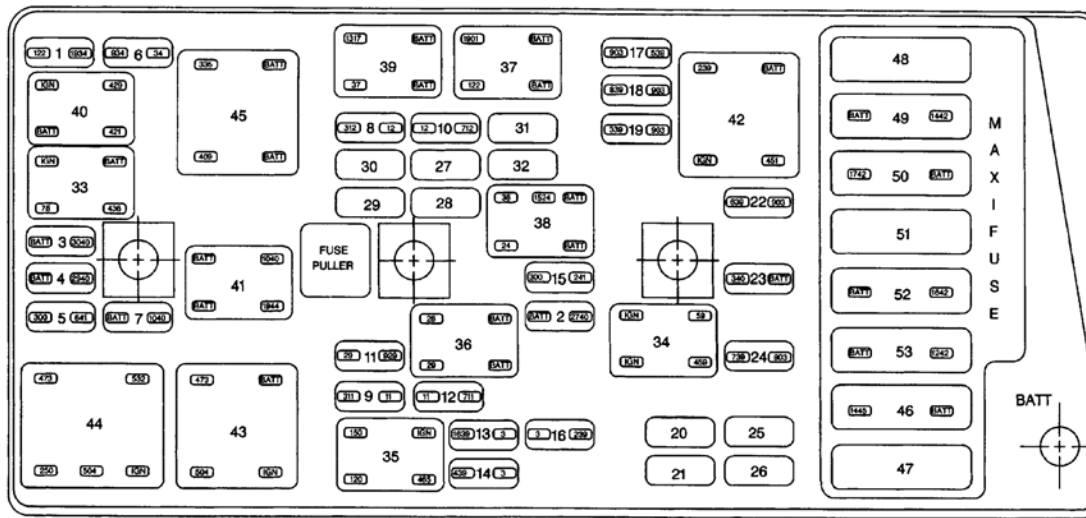

G00100761

Fig. 4: Identifying Underhood Electrical Center Components
 Courtesy of GENERAL MOTORS CORP.

Fuse	Usage	Fuse	Usage
1	Rear Fog Lamp	29	Spare
2	Approach	30	Spare
3	Right Headlamp Motor	31	Spare
4	Left Headlamp Motor	32	Spare
5	Anti-Lock Brakes	33	Micro Relay - Air Pump
6	Fog Lamp	34	Micro Relay - Air Conditioner and Clutch
7	Selective Real Time Damping	35	Micro Relay - Fuel Pump
8	Headlamp Low Beam Right	36	Micro Relay - Horn
9	Headlamp High Beam Right	37	Micro Relay - Rear Fog Lamp
10	Headlamp Low Beam Left	38	Micro Relay - Back-Up Lamps
11	Horn	39	Micro Relay - Fog Lamp
12	Headlamp High Beam Left	40	Micro Relay - AIR Solenoid
13	Fuel Pump	41	Micro Relay - Selective Real Time Damping
14	Cooling Fan - Ignition 3	42	Mini Relay - Ignition
15	Oxygen Sensor	43	Mini Relay - Cooling Fan 2
16	Powertrain Control Module	44	Mini Relay - Cooling Fan 3
17	Throttle Control	45	Mini Relay - Cooling Fan 1
18	Injector 2	46	Maxi Fuse - Cooling Fan 2
19	Engine Ignition	47	Blank
20	Blank	48	Blank
21	Blank	49	Maxi Fuse - Cooling Fan 1
22	Injector 1	50	Maxi Fuse - Air Pump
23	Powertrain Control Module	51	Blank
24	Air Conditioning	52	Maxi Fuse - Anti-Lock Brakes
25	Blank	53	Anti-Lock Brakes and Selective Real Time Damping Electronics
26	Blank	54	Fuse Puller
27	Spare		
28	Spare		

G00100762

Fig. 5: Underhood Electrical Center Legend
Courtesy of GENERAL MOTORS CORP.